

# RUNFLAT Tire Systems

(An ISO 9001-2015 Certified Company)

Plot. 9/6/A, Road No. 5, Industrial Park Nacharam,  
Hyderabad - 500076, Telangana, INDIA.

Phone: +914029701220, Web: www.runflat.in

E Mail: sales@runflat.in, vjapala@yahoo.com,



GST No: 36ANJPJ7488B1ZR

## RUNFLAT FITTING MANUAL

1		MPV Run Flat Wheel Assembly 1. Tyre 2. Wheel Rim 3. Runflat System
2		Apply Runflat Lubricant sufficiently inside the tire.
3		Insert one by one all three Runflat Inserts inside the tire, apply thread locker to all the bolts and fasten them
4		Tighten the bolts with the torque wrench with 100NM torque setting.
5		Mount the wheel with the marks for stopper so that it is aligned and pressed into its position.
6		See that Runflat is properly mounted on to the stopper welded on the wheel rim.

# RUNFLAT Tire Systems

(An ISO 9001-2015 Certified Company)



Plot. 9/6/A, Road No. 5, Industrial Park Nacharam,  
Hyderabad - 500076, Telangana, INDIA.

Phone: +914029701220, Web: [www.runflat.in](http://www.runflat.in)

E Mail: [sales@runflat.in](mailto:sales@runflat.in), [vjapala@yahoo.com](mailto:vjapala@yahoo.com),



GST No: 36ANJPJ7488B1ZR

7		Mount the Rubber seal on to the wheel rim carefully by applying some tire mounting paste or shampoo.
8		Press the tire bead with the tire press and mount the lock ring to its place and lock the safety pin and fill the air to 100PSI and do the air leakage test.

## TOOLS AND ACCESSORIES REQUIRED:

1. TYRE PRESS
2. TYRE EXPANDER
3. ALLEN KEY M14
4. TORQUE WRENCH (100 – 160 NM)
5. LOCKTITE
6. RUNFLAT LUBRICANT
7. M16 HIGH TENSILE ALLEN BOLTS 110 MM LENGTH
8. QUARTER PIN 3 MM
9. TWIN WASHER
10. RACHET WITH M14 ALLEN KEY
11. AIR COMPRESSOR

## SERVICE SUPPORT:

**Venkateshwar Rao Japala (VENKY)**

**MOBILE: +91 9959902433**

**: +91 9490912433**

**PHONE : +91 40 29701220**

**MAIL : [sales@runflat.in](mailto:sales@runflat.in)**

**: [vjapala@yahoo.com](mailto:vjapala@yahoo.com)**

**WEB : <https://runflat.in/>**